


# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 2150 А  
для автомобилей  
VW Caddy \*  
VW Caddy MAX\***

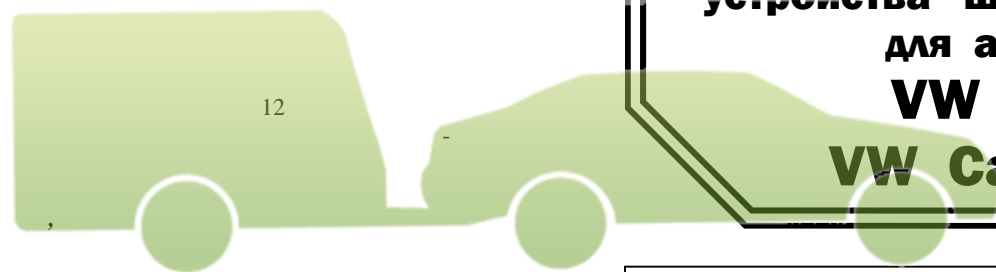

# ФАРКОПОВ

# +7 (495) 6-693-693

VW Caddy	02/2004-...
VW Caddy MAX	2007-...
	1200
	50
	18,3


[www.magfarkop.ru](http://www.magfarkop.ru)  
[magfarkop@yandex.ru](mailto:magfarkop@yandex.ru)

462800,

18  
: (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 785-66-07  
[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

« - »  
" (8182) 22-48-15  
" 8(8442) 98-74-98  
" 8(343) 379-39-89, 373-42-73  
" 8(343) 26-88-308  
" 8(3952) 710-194  
" 8(495) 777-54-59  
" 8(495) 745-79-11  
" 8(495) 788-95-97  
" 8(495) 720-51-03  
" 8(3532) 57-99-85  
" 8-905-899-5012  
" 8(383) 291-59-60  
" 8(831) 279-53-24  
" 8(3422) 98-27-20  
" 8(342) 220-87-87  
" 8-927-002-90-06  
" 8(3462) 24-00-44  
" 8(3842) 21-14-76  
" 8-902-940-4151  
" 8(3452) 32-22-12, 41-52-62  
" 8-961-213-0278  
" 8-917-347-1700  
" 8(351) 269-44-75, 900-72-73  
" 8(3512) 773-76-91

41.55-2005.

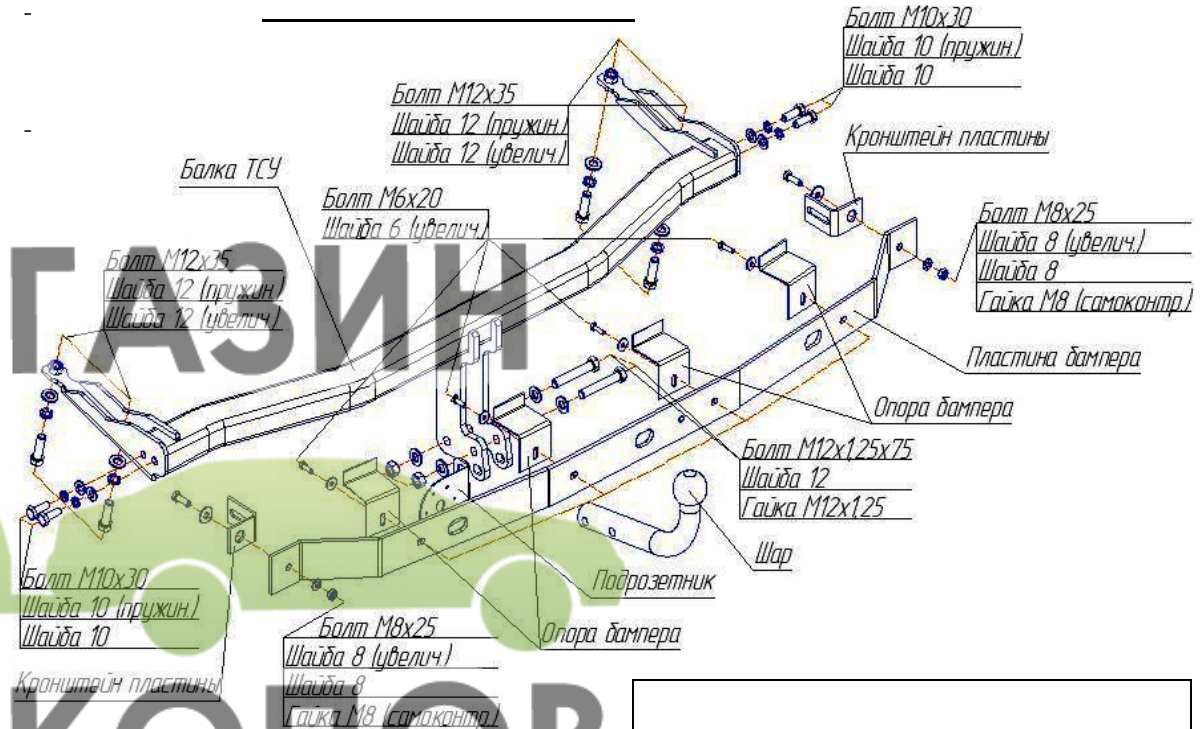


+7 (495) 6-693-693

Nm, 12 1,25 = 87 Nm, 10 = 46 Nm, 8 = 23 Nm.

1		
2		
3		
4		
5		
6		
7		



Схема обрезки кабеля

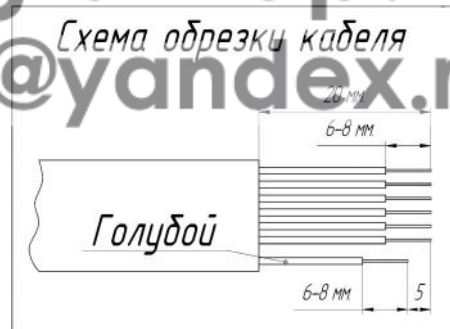

	3
12 1,25 75	2
10 30	4
12 35	4
8 25	2
6 20	4
12 1,25 /	2
12 ( )	4
8 с/	2
12	8
10 ( )	4
12 ( )	4
6 ( )	4
10	4
8 ( )	2
8	2
	4
	2
VH 0862	1
	1
	1
	1
190	1
	1