



M12x30 - 3ks
M12x40 - 4ks
M12x70 - 2ks (A)
M12x90 - 2ks (I)
M12x19 - 3ks (C)
M12x21 - 1ks (C)




M12 - 5ks (A, I)
M12 - 3ks (C)



PP12 - 9ks (A, I)
PP12 - 11ks (C)


C

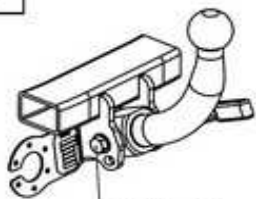


M12x19 - 3ks
M12x21 - 1ks



M12x90 - 2ks

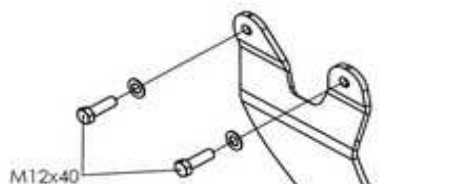

M12x40

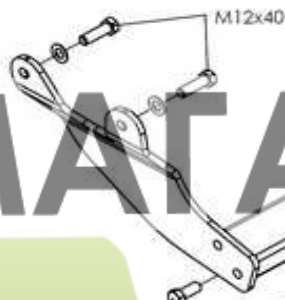

M12x40

M12x70 - 2ks

M12x30

AIC 325 243

FORD TRANSIT CONNECT, FORD TOURNEO CONNECT
Kód: F0836(A,I,C) 30. 9. 2011

A

МАГАЗИН

ФАРКОПОВ

NÁVOD NA MONTÁŽ:

Kód: F0836(A,I,C)

- 1. Demontujte rezervné koleso.
- 2. Odlepte fólie montážnych otvorov na pozdĺžnych nosníkoch vozidla.
- 3. Odlepte fólie montážnych otvorov na pozdĺžnych nosníkoch vozidla. Priložte rám k nosníkom karosérie. Do montážnych otvorov vložte spojovací materiál podľa obrázka a následne všetky skrutkové spoje utiahnite momentom podľa tabuľky.
- 4. Elektroinštaláciu zapojte podľa návodu.
- 5. Skontrolujte správnosť pripojenia elektroinštalácie.
- 6. Prevedte spätnú montáž demontovaných častí.
- 7. Dotiahnite skrutky spojovacej gule (držača spojovacej gule) momentom podľa tabuľky.

FITTING INSTRUCTIONS:

- 1. Remove the spare wheel.
- 2. Peel off foils covering assembly openings on the longitudinal bars of the vehicle.
- 3. Attach the frame to the body. Put the joining material into the assembly openings as shown in the Picture and then torque all the screw connections as shown in the table.
- 4. Connect the electrical installation as described in the instructions for use.
- 5. Make sure the electrical installation is properly connected.
- 6. Reassemble any removed parts.
- 7. Tighten the screws of the linkage ball (holder of the linkage ball) to the torque shown in the table.

DŮLEŽITÉ UPOZORNENIA:

- V miestach stykových plôch sa musí odstrániť pružná ochrana karosérie vozidla.
- Vŕtané otvory treba ošetriť antikoróznou hmotou.
- Použite len dodaný spojovací materiál v predpisanej triede kvality.
- Elektrické zariadenie sa namontuje podľa podmienok prevádzky cestných vozidiel na pozemných komunikáciách.
- Údaj S o maximálnom zvislom zaťažení na guľu je uvedený na výrobnom štítku ťažného zariadenia.
- Na ťažnom zariadení nie je možné nič upravovať ani meniť.
- Pred ukončením montáže je nutné prekontrolovať všetky spoje podľa tabuľky uťahovacích momentov!
- V prípade akýchkoľvek nejasností je nutné obrátiť sa na výrobcu ťažného zariadenia.
- Výrobca nenesie zodpovednosť za škody spôsobené nesprávnym použitím výrobku.

IMPORTANT ATTENTIONS:

- Remove insulating material on a car body in grips and joints of a coupling device with a car body.
- Put the anticorrosive substance on the drilled holes.
- Use supplied mechanical strength jointing material.
- Wiring of a coupling device must be up to a standard and car maker requirements.
- Statement S about the maximum vertical ball downtake is printed on the tow bar label.
- On the tow bar is no modification possible
- Check all the joints, look in the table of the spining moments, before finishing the montage!
- Contact the tow bar marker with any questions.
- The manufacturer is not responsible for the damages caused by wrong using on the product.

Tabuľka uťahovacích momentov skrutkových spojov pevnosti 8.8 / Table of specified torque and hardenss settings 8.8

M6 - 9,5Nm, **M8** - 23Nm, **M10** - 46Nm, **M10x1,25** - 49Nm, **M12** - 79Nm, **M12x1,25** - 87Nm, **M12x1,5** - 83Nm, **M14** - 125Nm, **M16** - 195Nm