

M10x35 - 4ks
M12x70 - 2ks (A)
M12x19 - 3ks (C)
M12x21 - 1ks (C)



M12 - 2ks (A)




P10 - 4ks




PP10 - 4ks
PP12 - 2ks (A)
PP12 - 4ks (C)

C

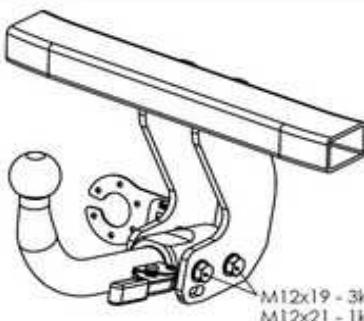

МАГАЗИН

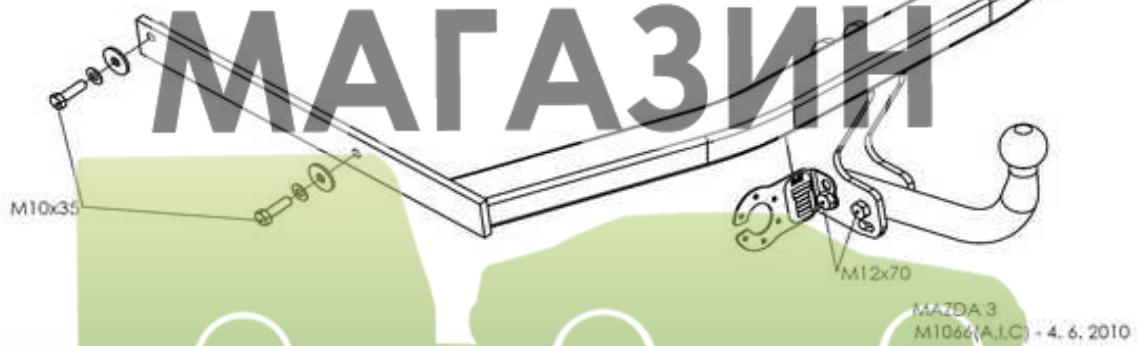

A

ФАРКОПОВ

Код:M1066(A,I,C)

НÁVOD NA MONTÁŽ:

■ 1. Uvoľnite čalúnenie po stranach batožinového priestoru. ■ 2. Demontujte zadné svetlá a zadný plastový nárazník spolu s kovovou výstuhou nárazníka. ■ 3. Odlepte fólie montážnych otvorov na pozdižných nosníkoch vozidla. ■ 4. Nasuňte rám do nosníkov karosérie. Do montážnych otvorov vložte upevňovacie skrutky M10x35 s pružnými a hladkými podložkami podľa obrázka. Skrutky utiahnite momentom podľa tabuľky. ■ 5. Zapojte vodiče elektroinstalácie podľa návodu. ■ 6. Skontrolujte správnosť pripojenia elektroinstalácie. ■ 7. Demontujte spojovaciu guľu. ■ 8. Namontujte späť zadný plastový nárazník bez kovovej výstuhy, ktorú nahradza rám ťažného zariadenia. ■ 9. Prevedte spätnú montáž ďalších demontovaných častí. ■ 10. Namontujte spojovaciu guľu. Dotiahnite skrutky spojovacej gule (držiaka spojovacej gule) momentom podľa tabuľky.

FITTING INSTRUCTIONS:

■ 1. Release the padding from both sides of the luggage compartment. ■ 2. Remove the rear lights and release the rear plastic bumper together with the metal bumper reinforcement. ■ 3. Peel off foils covering assembly holes on the frame side beams of the vehicle. ■ 4. Insert the tow bar into the consoles of the bodywork. Put the M10x35 bolts with spring and smooth washers into assembly holes as shown in the picture. Torque the screws as shown in the table. ■ 5. Connect the electrical installation conductors as described in the instructions for use. ■ 6. Make sure the electrical installation is properly connected. ■ 7. Remove the linkage ball. ■ 8. Replace the rear plastic bumper without the metal reinforcement, which will be replaced by the tow-bar frame. ■ 9. Reassemble any removed parts. ■ 10. Fit the linkage ball. Tighten the screws of the linkage ball (holder of the linkage ball) to the torque shown in the table.

ДОЛЕЖИТЕ УПОЗОРНЕНИЯ:

- V miestach stykových plôch sa musí odstrániť pružná ochrana karosérie vozidla.
- Vŕtané otvory treba ošetriť antikoróznom hmotou.
- Použite len dodaný spojovací materiál v predpisanej triede kvality.
- Elektrické zariadenie sa namontuje podľa podmienok prevádzky cestných vozidiel na pozemných komunikáciach.
- Údaj S o maximálnom zvislom zaťažení na gule je uvedený na výrobnom štítku ťažného zariadenia.
- Na ťažnom zariadení nie je možné nič upravovať ani meniť.
- Pred ukončením montáže je nutné prekontrolovať všetky spoje podľa tabuľky uťahovacích momentov!
- V prípade akýchkoľvek nejasností je nutné obrátiť sa na výrobcu ťažného zariadenia.
- Výrobca nenesie zodpovednosť za škody spôsobené nesprávnym použitím výrobku.

IMPORTANT ATTENTIONS:

- Remove insulating material on a car body in grips and joints of a coupling device with a car body.
- Put the anticorrosive substance on the drilled holes.
- Use supplied mechanical strength jointing material.
- Wiring of a coupling device must be up to a standard and car maker requirements.
- Statement S about the maximum vertical ball downtime is printed on the tow bar label.
- On the tow bar is no modification possible
- Check all the joints, look in the table of the spinning moments, before finishing the montage!
- Contact the tow bar marker with any questions.
- The manufacturer is not responsible for the damages caused by wrong using on the product.

Tabuľka uťahovacích momentov skrutkových spojov pevnosti 8.8 / Table of specified torque and hardenss settings 8.8

M6 - 9,5Nm, **M8** - 23Nm, **M10** - 46Nm, **M10x1,25** - 49Nm, **M12** - 79Nm, **M12x1,25** - 87Nm, **M12x1,5** - 83Nm, **M14** - 125Nm, **M16** - 195Nm